

# conga-PA7 Pico-ITX SBC

Based on Intel® Atom® x6000E/RE Series and Intel® Pentium® and Celeron® J Series processors

***User's Guide***

Revision 1.00

# Revision History

Revision	Date (yyyy-mm-dd)	Author	Changes
0.1	2021-04-15	BEU	<ul style="list-style-type: none"><li>• Preliminary release</li></ul>
0.2	2021-07-02	BEU	<ul style="list-style-type: none"><li>• Added Software License Information</li><li>• Updated section 6.6 "congatec Battery Management Interface"</li></ul>
1.00	2021-12-18	BEU	<ul style="list-style-type: none"><li>• Updated processor from J6425 to J6426 for PN 048920 in Table 1 "conga-PA7 Commercial Variants"</li><li>• Removed Table 5 "Power Supplies" and removed reference to this table from note in section 5.1.1 "DC Power Jack"</li><li>• Updated Table 5 "Feature Summary"</li><li>• Added note to section 2.2 "Supported Operating Systems" and updated section 6.5.4 "OEM BIOS Code/Data" because CSM is no longer supported</li><li>• Removed support for Windows IoT 10 Core from section 2.1 "Feature List" and 2.2 "Supported Operating Systems"</li><li>• Added values to Table 7 " Power Consumption Values" and Table 8 " CMOS Battery Power Consumption"</li><li>• Updated block diagram in section 3 "Block Diagram"</li><li>• Updated all drawings in section 4 "Cooling Solutions"</li><li>• Changed picture of connector X8 in section 5.5.3 "USB 2.0 Header"</li><li>• Added note about supported OS for the CAN ports in section 5.9 "CAN Ports"</li><li>• Removed specific naming of microcontroller in section 6.4 "congatec Board Controller (cBC)"</li><li>• Removed SMBus from section 6.6 "congatec Battery Management Interface"</li></ul>

---

# Preface

---

This user's guide provides information about the components, features and connectors available on the conga-PA7 Pico-ITX SBC.

## Software Licenses

### Notice Regarding Open Source Software

The congatec products contain Open Source software that has been released by programmers under specific licensing requirements such as the "General Public License" (GPL) Version 2 or 3, the "Lesser General Public License" (LGPL), the "ApacheLicense" or similar licenses.

You can find the specific details at <https://www.congatec.com/en/licenses/>. Search for the revision of the BIOS/UEFI or Board Controller Software (as shown in the POST screen or BIOS setup) to get the complete product related license information. To the extent that any accompanying material such as instruction manuals, handbooks etc. contain copyright notices, conditions of use or licensing requirements that contradict any applicable Open Source license, these conditions are inapplicable.

The use and distribution of any Open Source software contained in the product is exclusively governed by the respective Open Source license. The Open Source software is provided by its programmers without ANY WARRANTY, whether implied or expressed, of any fitness for a particular purpose, and the programmers DECLINE ALL LIABILITY for damages, direct or indirect, that result from the use of this software.

### OEM/ CGUTL BIOS

BIOS/UEFI modified by customer via the congatec System Utility (CGUTL) is subject to the same license as the BIOS/UEFI it is based on. You can find the specific details at <https://www.congatec.com/en/licenses/>.

## Disclaimer

The information contained within this user's guide, including but not limited to any product specification, is subject to change without notice.

congatec GmbH provides no warranty with regard to this user's guide or any other information contained herein and hereby expressly disclaims any implied warranties of merchantability or fitness for any particular purpose with regard to any of the foregoing. congatec GmbH assumes no liability for any damages incurred directly or indirectly from any technical or typographical errors or omissions contained herein or for discrepancies between the product and the user's guide. In no event shall congatec GmbH be liable for any incidental, consequential, special, or exemplary damages, whether based on tort, contract or otherwise, arising out of or in connection with this user's guide or any other information contained herein or the use thereof.

---

## Intended Audience

This user's guide is intended for technically qualified personnel. It is not intended for general audiences.

## Lead-Free Designs (RoHS)

All congatec GmbH products are created from lead-free components and are completely RoHS compliant.

## Electrostatic Sensitive Device



All congatec GmbH products are electrostatic sensitive devices. They are enclosed in static shielding bags, and shipped enclosed in secondary packaging (protective packaging). The secondary packaging does not provide electrostatic protection.

Do not remove the device from the static shielding bag or handle it, except at an electrostatic-free workstation. Also, do not ship or store electronic devices near strong electrostatic, electromagnetic, magnetic, or radioactive fields unless the device is contained within its original packaging. Be aware that failure to comply with these guidelines will void the congatec GmbH Limited Warranty.

## Symbols

The following symbols are used in this user's guide:



### Warning

*Warnings indicate conditions that, if not observed, can cause personal injury.*



### Caution

*Cautions warn the user about how to prevent damage to hardware or loss of data.*



### Note

*Notes call attention to important information that should be observed.*



### Connector Type

*Describes the connector used on the Single Board Computer and a possible mating connector.*

---

## Copyright Notice

*Copyright © 2021, congatec GmbH. All rights reserved. All text, pictures and graphics are protected by copyrights. No copying is permitted without written permission from congatec GmbH.*

*congatec GmbH has made every attempt to ensure that the information in this document is accurate yet the information contained within is supplied "as-is".*

## Trademarks

Product names, logos, brands, and other trademarks featured or referred to within this user's guide, or the congatec website, are the property of their respective trademark holders. These trademark holders are not affiliated with congatec GmbH, our products, or our website.

## Warranty

congatec GmbH makes no representation, warranty or guaranty, express or implied regarding the products except its standard form of limited warranty ("Limited Warranty") per the terms and conditions of the congatec entity, which the product is delivered from. These terms and conditions can be downloaded from [www.congatec.com](http://www.congatec.com). congatec GmbH may in its sole discretion modify its Limited Warranty at any time and from time to time.

The products may include software. Use of the software is subject to the terms and conditions set out in the respective owner's license agreements, which are available at [www.congatec.com](http://www.congatec.com) and/or upon request.

Beginning on the date of shipment to its direct customer and continuing for the published warranty period, congatec GmbH represents that the products are new and warrants that each product failing to function properly under normal use, due to a defect in materials or workmanship or due to non conformance to the agreed upon specifications, will be repaired or exchanged, at congatec's option and expense.

Customer will obtain a Return Material Authorization ("RMA") number from congatec GmbH prior to returning the non conforming product freight prepaid. congatec GmbH will pay for transporting the repaired or exchanged product to the customer.

Repaired, replaced or exchanged product will be warranted for the repair warranty period in effect as of the date the repaired, exchanged or replaced product is shipped by congatec, or the remainder of the original warranty, whichever is longer. This Limited Warranty extends to congatec's direct customer only and is not assignable or transferable.

Except as set forth in writing in the Limited Warranty, congatec makes no performance representations, warranties, or guarantees, either express or implied, oral or written, with respect to the products, including without limitation any implied warranty (a) of merchantability, (b) of fitness for a particular purpose, or (c) arising from course of performance, course of dealing, or usage of trade.

congatec GmbH shall in no event be liable to the end user for collateral or consequential damages of any kind. congatec shall not otherwise be liable for loss, damage or expense directly or indirectly arising from the use of the product or from any other cause. The sole and exclusive remedy against congatec, whether a claim sound in contract, warranty, tort or any other legal theory, shall be repair or replacement of the product only.

## Certification

congatec GmbH is certified to DIN EN ISO 9001 standard.



## Technical Support

congatec GmbH technicians and engineers are committed to providing the best possible technical support for our customers so that our products can be easily used and implemented. We request that you first visit our website at [www.congatec.com](http://www.congatec.com) for the latest documentation, utilities and drivers, which have been made available to assist you. If you still require assistance after visiting our website then contact our technical support department by email at [support@congatec.com](mailto:support@congatec.com)

## Terminology

Term	Description
PCIe	Peripheral Component Interface Express
cBC	congatec Board Controller
SDIO	Secure Digital Input Output
USB	Universal Serial Bus
SATA	Serial AT Attachment: serial-interface standard for hard disks
HDA	High Definition Audio
S/PDIF	Sony/Philips Digital Interconnect Format
TMDS	Transition Minimized Differential Signaling
LPC	Low Pin-Count
I <sup>2</sup> C Bus	Inter-Integrated Circuit Bus
SBC	Single Board Computer
SM Bus	System Management Bus
SPI	Serial Peripheral Interface
GbE	Gigabit Ethernet
LVDS	Low-Voltage Differential Signaling
DDC	Display Data Channel is an I <sup>2</sup> C bus interface between a display and a graphics adapter.
N.C	Not connected
N.A	Not available
TBD	To be determined

# Contents

1	Introduction .....	10	5.7.1	DP++ Port.....	29
1.1	Pico-ITX Concept.....	10	5.7.2	USB Type-C® Port.....	29
1.2	conga-PA7.....	10	5.7.3	LVDS Header.....	30
1.2.1	Options Information.....	11	5.7.3.1	Backlight Power Header .....	31
1.2.2	Optional Accessories .....	12	5.7.3.2	Panel Power Jumper .....	31
2	Specification .....	13	5.8	COM Ports .....	32
2.1	Feature List .....	13	5.9	CAN Ports .....	33
2.2	Supported Operating Systems .....	14	5.10	M.2 Key-B .....	34
2.3	Mechanical Dimensions .....	14	5.11	M.2 Key-E .....	35
2.4	Power Supply Voltage.....	14	5.12	CPU Fan Header .....	37
2.5	Power Consumption .....	15	5.13	BIOS Flash Header.....	37
2.6	Supply Voltage Battery Power .....	16	6	Additional Features.....	38
2.7	Environmental Specifications.....	17	6.1	Feature Connectors .....	38
3	Block Diagram.....	18	6.1.1	Buttons and LEDs .....	38
4	Cooling Solutions.....	19	6.1.2	I2C and Watchdog.....	39
4.1	CSP Dimensions .....	20	6.1.3	GPIOs and Real-Time Trigger Signals.....	40
4.2	HSP Dimensions.....	22	6.2	DRAM.....	40
5	Connector Description.....	24	6.3	Flash Storage .....	40
5.1	Power Supply Connectors.....	24	6.4	congatec Board Controller (cBC).....	41
5.1.1	DC Power Jack.....	24	6.4.1	Fan Control .....	41
5.1.2	2-Pin Power Connector .....	24	6.4.2	Power Loss Control .....	41
5.1.3	USB Type-C® Port.....	25	6.4.3	Board Information .....	41
5.2	Cell Battery Header .....	25	6.5	OEM BIOS Customization.....	41
5.3	System State LED.....	26	6.5.1	OEM Default Settings .....	41
5.4	Audio Header .....	26	6.5.2	OEM Boot Logo.....	42
5.5	USB Interfaces.....	27	6.5.3	OEM POST Logo .....	42
5.5.1	USB Type-A Ports.....	27	6.5.4	OEM BIOS Code/Data.....	42
5.5.2	USB Type-C® Port.....	27	6.5.5	OEM DXE Driver .....	42
5.5.3	USB 2.0 Header .....	28	6.6	congatec Battery Management Interface .....	42
5.6	Ethernet Ports .....	28	6.7	API Support (CGOS) .....	43
5.7	Display Interfaces.....	29	6.8	Thermal/Voltage Monitoring.....	43
			6.9	External System Wake Event .....	43
			6.10	Security Features.....	43

---

7	Mechanical Drawing .....	44
8	BIOS Setup Description .....	45
8.1	Navigating the BIOS Setup Menu .....	45
8.2	BIOS Versions.....	45
8.3	Updating the BIOS.....	46
8.4	Supported Flash Device.....	46



# List of Tables

---

Table 1	conga-PA7 Commercial Variants.....	11
Table 2	conga-PA7 Industrial Variants .....	11
Table 3	Cooling Solutions.....	12
Table 4	Cables.....	12
Table 5	Feature Summary.....	13
Table 6	Measurement Description.....	15
Table 7	Power Consumption Values.....	16
Table 8	CMOS Battery Power Consumption .....	16
Table 9	X21 Pinout .....	24
Table 10	X22 Pinout .....	24
Table 11	X23 Pinout .....	25
Table 12	D20 Description.....	26
Table 13	X6 Pinout .....	26
Table 14	X8 Pinout .....	28
Table 15	X12, X13 Description .....	28
Table 16	X3 Pinout .....	30
Table 17	X4 Pinout .....	31
Table 18	X24 Settings.....	31
Table 19	X15, X16 Pinout.....	32
Table 20	X1, X2 Pinout.....	33
Table 21	X10 Pinout .....	34
Table 22	X11 Pinout .....	35
Table 23	X17 Pinout .....	37
Table 24	X14 Pinout .....	37
Table 25	X18 Pinout .....	38
Table 26	X19 Pinout .....	39
Table 27	X20 Pinout .....	40

---

# 1 Introduction

---

## 1.1 Pico-ITX Concept

The Pico-ITX form factor provides system designers and manufacturers with a standardized ultra compact platform for development. With a footprint of 100 mm x 72 mm, this scalable platform promotes the design of highly integrated, energy efficient systems. Due to its small size, the Pico-ITX form factor enables PC appliance designers not only to design attractive low cost devices but also allows them to explore a huge variety of product development options - from compact space-saving designs to fully functional Information Station and Value PC systems. This helps to reduce product design cycle and encourages rapid innovation in system design to meet the ever-changing needs of the market.

Additionally, the boards can be passively cooled, presenting opportunities for fanless designs. The Pico-ITX boards are equipped with various interfaces such as PCI Express, USB, Ethernet, Displays and Audio.

## 1.2 conga-PA7

The conga-PA7 is a Single Board Computer (SBC) design based on the Pico-ITX specification. The conga-PA7 SBC features the Intel® Atom® x6000E/RE Series and Intel® Pentium® and Celeron® J Series processors (formerly Elkhart Lake). With maximum 12 W TDP processors, the SBC offers Ultra Low Power boards with high computing performance and outstanding graphics. Additionally, the SBC offers onboard LPDDR4x memory, eMMC storage, multiple I/O interfaces, up to three independent display interfaces, and various congatec embedded features.

With small board size and low height keep-out zones, the conga-PA7 provides manufacturers and system designers with the opportunity to design compact systems for space restricted areas.

The various features and capabilities offered by the conga-PA7 makes it ideal for the design of compact, energy efficient, performance-oriented embedded systems.

## 1.2.1 Options Information

The conga-PA7 is currently available in eight variants. This user's guide describes all of these variants. The tables below show the different configurations available. Check for the PN that applies to your product. This will tell you what options described in this user's guide are available on your particular module.

Table 1 conga-PA7 Commercial Variants

PN	048900	048901	048902	048920	048921
Intel® Processor	Atom® x6425E Quad Core 2.0 GHz	Atom® x6413E Quad Core 1.5 GHz	Atom® x6211E Dual Core 1.3 GHz	Pentium® J6426 Quad Core 2.0 GHz	Celeron® J6413 Quad Core 1.8 GHz
Burst Frequency	2.7 GHz	2.7 GHz	3.0 GHz	2.7 GHz *	2.7 GHz
Onboard Memory	8 GB 3733 MT/s	4 GB 3200 MT/s	4 GB 3200 MT/s	8 GB 3733 MT/s	4 GB 3733 MT/s
eMMC	64 GB	32 GB	32 GB	64 GB	32 GB
Processor Graphics	Intel® UHD Graphics	Intel® UHD Graphics	Intel® UHD Graphics	Intel® UHD Graphics	Intel® UHD Graphics
Execution Units	32	16	16	32	16
Graphics Base / Burst	500 MHz / 750 MHz	500 MHz / 750 MHz	350 MHz / 750 MHz	400 MHz / 850 MHz	400 MHz / 800 MHz
Processor TDP (Max)	12 W	9 W	6 W	10 W	10 W

\* Up to 3.0 GHz if only one or two cores are active.

Table 2 conga-PA7 Industrial Variants

PN	048910	048911	048912
Intel® Processor	Atom® x6425RE Quad Core 1.9 GHz	Atom® x6414RE Quad Core 1.5 GHz	Atom® x6212RE Dual Core 1.2 GHz
Burst Frequency	N/A	N/A	N/A
Onboard Memory	8 GB 4267 MT/s	4 GB 3200 MT/s	4 GB 3200 MT/s
eMMC	64 GB	32 GB	32 GB
Processor Graphics	Intel® UHD Graphics	Intel® UHD Graphics	Intel® UHD Graphics
Execution Units	32	16	16
Graphics Base / Burst	400 MHz / N/A	400 MHz / N/A	350 MHz / N/A
Processor TDP (Max)	12 W	9 W	6 W

## 1.2.2 Optional Accessories

Table 3 Cooling Solutions

Article	PN	Description
conga-PA7/HSP-T	048950	Heatspreader solution for conga-PA7 based on open silicon Intel Pentium and Celeron J and N processors. All standoffs are M2.5 thread.
conga-PA7/i-HSP-T	048951	Heatspreader solution for conga-PA7 based on lidded silicon Intel Atom x6000E processors. All standoffs are M2.5 thread.
conga-PA7/CSP-T	048952	Passive cooling solution for conga-PA7 based on open silicon Pentium and Celeron J and N processors. All standoffs are M2.5 thread.
conga-PA7/i-CSP-T	048953	Passive cooling solution for conga-PA7 based on lidded silicon Atom X6000E processors. All standoffs are M2.5 thread.
conga-PA7/HSP-B	048954	Heatspreader solution for conga-PA7 based on open silicon Intel Pentium and Celeron J and N processors. All standoffs are with 2.7mm borehole.
conga-PA7/i-HSP-B	048955	Heatspreader solution for conga-PA7 based on lidded silicon Intel Atom x6000E processors. All standoffs are with 2.7mm borehole.

Table 4 Cables

Article	PN	Description	Fits to Connector
cab-Pico-ITX-Audio Cable Adapter	14000146	Audio cable adapter, 15cm	X6
cab-Pico-ITX-Buttons-LED	14000147	Buttons and LEDs adapter, 15cm	X18
cab-Pico-ITX-Buttons-LED, 100cm	14000148	Buttons and LEDs adapter, 100cm	X18
cab-Pico-ITX-GPIO	14000151	GPIO cable, 15cm, wires with open ends	X20
cab-Pico-ITX-RS232	14000152	RS232 cable adapter, 15cm (Molex Picoblade to DSUB 9)	X15, X16
cab-Pico-ITX-RS422	14000153	RS422 cable adapter, embedded termination, 15cm (Molex Picoblade to DSUB 9)	X15, X16
cab-Pico-ITX-RS485	14000154	RS485 cable adapter, embedded termination, 15cm (Molex Picoblade to DSUB 9)	X15, X16
cab-Pico-ITX-External-Power	14000157	Power cable with DC jack and 4mm banana plugs, 100cm	X21
cab-Pico-ITX-Feature	14000161	Feature cable, 15cm, wires with open ends	X19
cab-Pico-ITX-Power	14000172	Power cable adapter from DC jack to Molex MicroFit (int. power connector)	X22
cab-Pico-ITX-Backlight	14000206	LCD backlight cable for AUO G170EG01 V1	X4
cab-Pico-ITX-USB20-Twin	14000210	USB 2.0 cable adapter, 2mm pin header, 20 / 25 cm	X8
cab-Pico-ITX-LVDS	14000211	LCD data cable for AUO G170EG01 V1 (LVDS)	X3

## 2 Specification

### 2.1 Feature List

Table 5 Feature Summary

<b>Form Factor</b>	Pico-ITX Single Board Computer; 100 x 72 mm		
<b>CPU</b>	Intel® Atom® x6000E/RE Series and Intel® Pentium® and Celeron® J Series processors (formerly Elkhart Lake)		
<b>DRAM</b>	up to 4 Channels onboard LPDDR4x with up to 4,267 MT/s; max. system capacity 16 GB		
<b>Chipset</b>	Integrated in SoC		
<b>Ethernet</b>	2x LAN Gbit / 100 Mbit / 10 Mbit with TSN support and Out-Of-Band Management 2x real-time trigger		
<b>Mass Storage</b>	eMMC 5.1 onboard flash up to 64 GB (optional up to 128 GB)		
<b>Sound</b>	Intel® Hhigh Definition Audio via codec CS4207		
<b>Graphics</b>	Intel® UHD Graphics for 10th Gen Intel® Processor		
<b>Internal Connectors</b>	2x USB 2.0 1x LVDS 18/24bit 1x Backlight power connector (5V, 12V) 1x Audio Connector (HP/Line Out, MIC In, S/PDIF Out) 1x Power In (+12V) 2x COM (RS232/422/485)	1x Fan Connector with PWM 3x Feature Connector 1x M.2 key ID B type 2280 (2 PCIe lanes/SATA, USB 2.0) or type 2242 (opt.) 1x M.2 key ID E type 2230 (1 PCIe lane, USB 2.0) 2x CAN (opt.) 1x 2-pin Header for RTC Power Backup	
<b>External Connectors</b>	1x DP++ 2x LAN RJ45 1x USB 3.1 Gen2 Type C (with Power Delivery and DP Alt Mode)	2x USB 3.1 Gen2 Type A 1x DC-In	
<b>congatec Board controller</b>	Multistage watchdog; non-volatile user data storage; manufacturing and board Information; board statistics; fast mode and multi-master I <sup>2</sup> C bus; power loss control		
<b>Embedded BIOS Feature</b>	AMI Aptio® UEFI firmware; 32 Mbyte serial SPI with congatec Embedded BIOS features; OEM Logo; OEM CMOS Defaults; LCD Control; Display Auto Detection; Backlight Control; Flash Update		
<b>Security</b>	TPM 2.0		
<b>Power Management</b>	ACPI 5 .0 compliant; Smart Battery Management		
<b>Operating Systems</b>	Microsoft® Windows 10; Microsoft® Windows 10 IoT Enterprise; Linux; Android; RTS Hypervisor		
<b>Temperature Range</b>	Commercial: Operating Temperature: 0 to +60°C Industrial: Operating Temperature: -40 to +85°C	Storage Temperature: -20 to +70°C Storage Temperature: -40 to +85°C	
<b>Humidity</b>	Operating: 10 to 90% r. H. non cond. Storage: 5 to 95% r. H. non cond.		
<b>Size</b>	100 x 72 mm		

---

## 2.2 Supported Operating Systems

The conga-PA7 supports the following operating systems:

- Microsoft® Windows 10
- Microsoft® Windows 10 IoT Enterprise
- Linux® (Yocto, Ubuntu, Wind River)
- Android®
- RTS Hypervisor



### Note

*The conga-PA7 only supports native UEFI operating systems. Legacy operating systems that require the Compatibility Support Module (CSM) as part of the UEFI firmware are not supported.*

## 2.3 Mechanical Dimensions

- 100 mm x 72 mm
- Top side max. 18.3 mm
- Bottom (CPU) side max. 3.4 mm

## 2.4 Power Supply Voltage

- 12 V DC  $\pm$  10%



### Caution

*The maximum operating input voltage is 13.5 volts. Do not exceed this rating for a prolonged time. Otherwise, the system may be damaged or may have reliability issues.*

## 2.5 Power Consumption

The power consumption values were measured with the following setup:

- conga-PA7
- conga-PA7 cooling solution
- Microsoft® Windows® 10



*The CPU was stressed to its maximum workload with the Intel® Power Thermal Utility (PTU).*

The power consumption values were recorded during the following system states:

**Table 6 Measurement Description**

System State	Description	Comment
S0: Minimum value	Lowest frequency mode (LFM) with minimum core voltage during desktop idle.	
S0: Maximum value	Highest frequency mode (HFM/Turbo Boost).	The CPU was stressed to its maximum frequency.
S0: Peak value	Highest power spike during the measurement of "S0: Maximum value". This state shows the peak value over a short period of time (worst case power consumption value).	Consider this value when designing the system's power supply to ensure that sufficient power is supplied during worst case scenarios.
S3	Suspend to RAM state.	
S5	Soft-Off state.	
S5e	Enhanced Soft-Off state.	



1. *The fan was powered externally.*
2. *All other peripherals except the LCD monitor were disconnected before measurement.*

The tables below provide additional information about the power consumption data for each of the conga-PA7 variants offered. The values are recorded at various operating modes.

Table 7 Power Consumption Values

PN	Memory Size	HW Rev.	BIOS Rev.	OS (64-bit)	CPU			Current (A) @ 12 V				
					Variant	Cores	Base / Burst Freq. (GHz)	S0: Min	S0: Max	S0: Peak	S3	S5
048900	8 GB	A.0	PA70R010	Windows® 10	Atom® x6425E	4	2.0 / 2.7	0.39	2.09	2.48	0.12	0.12
048901	4 GB	A.0	PA70R010	Windows® 10	Atom® x6413E	4	1.5 / 2.7	0.39	1.44	2.36	0.12	0.12
048902	4 GB	A.0	PA70R010	Windows® 10	Atom® x6211E	2	1.3 / 3.0	0.38	0.94	2.13	0.12	0.11
048910	8 GB	A.0	PA70R010	Windows® 10	Atom® x6425RE	4	1.9 / N/A	0.37	1.29	1.40	0.12	0.12
048911	4 GB	A.0	PA70R010	Windows® 10	Atom® x6414RE	4	1.5 / N/A	0.36	1.11	1.30	0.12	0.12
048912	4 GB	A.0	PA70R010	Windows® 10	Atom® x6212RE	2	1.2 / N/A	0.37	0.88	1.10	0.12	0.12
048920	8 GB	A.0	PA70R010	Windows® 10	Pentium® J6426	4	2.0 / 2.7*	0.38	1.78	2.48	0.12	0.11
048921	4 GB	A.0	PA70R010	Windows® 10	Celeron® J6413	4	1.8 / 2.7	0.42	1.68	2.43	0.14	0.14

\* Up to 3.0 GHz if only one or two cores are active.



**Note**  
With fast input voltage rise time, the inrush current may exceed the measured peak current.

## 2.6 Supply Voltage Battery Power

Table 8 CMOS Battery Power Consumption

RTC @	Voltage	Current
-10°C	3 V DC	2.06 µA
20°C	3 V DC	2.27 µA
70°C	3 V DC	3.60 µA



1. Do not use the CMOS battery power consumption values listed above to calculate CMOS battery lifetime.
2. Measure the CMOS battery power consumption in your customer specific application in worst case conditions (for example, during high temperature and high battery voltage).
3. Consider also the self-discharge of the battery when calculating the lifetime of the CMOS battery. For more information, refer to application note AN9\_RTC\_Battery\_Lifetime.pdf on congatec GmbH website at [www.congatec.com/support/application-notes](http://www.congatec.com/support/application-notes).
4. We recommend to always have a CMOS battery present when operating the conga-PA7.



---

## 2.7 Environmental Specifications


Temperature (commercial variants)	Operation: 0° to 60°C	Storage: -20° to +70°C
Temperature (industrial variants)	Operation: -40° to 85°C	Storage: -40° to +85°C
Humidity	Operation: 10% to 90%	Storage: 5% to 95%



### Caution

*The above operating temperatures must be strictly adhered to at all times. Humidity specifications are for non-condensing conditions.*

# 3 Block Diagram

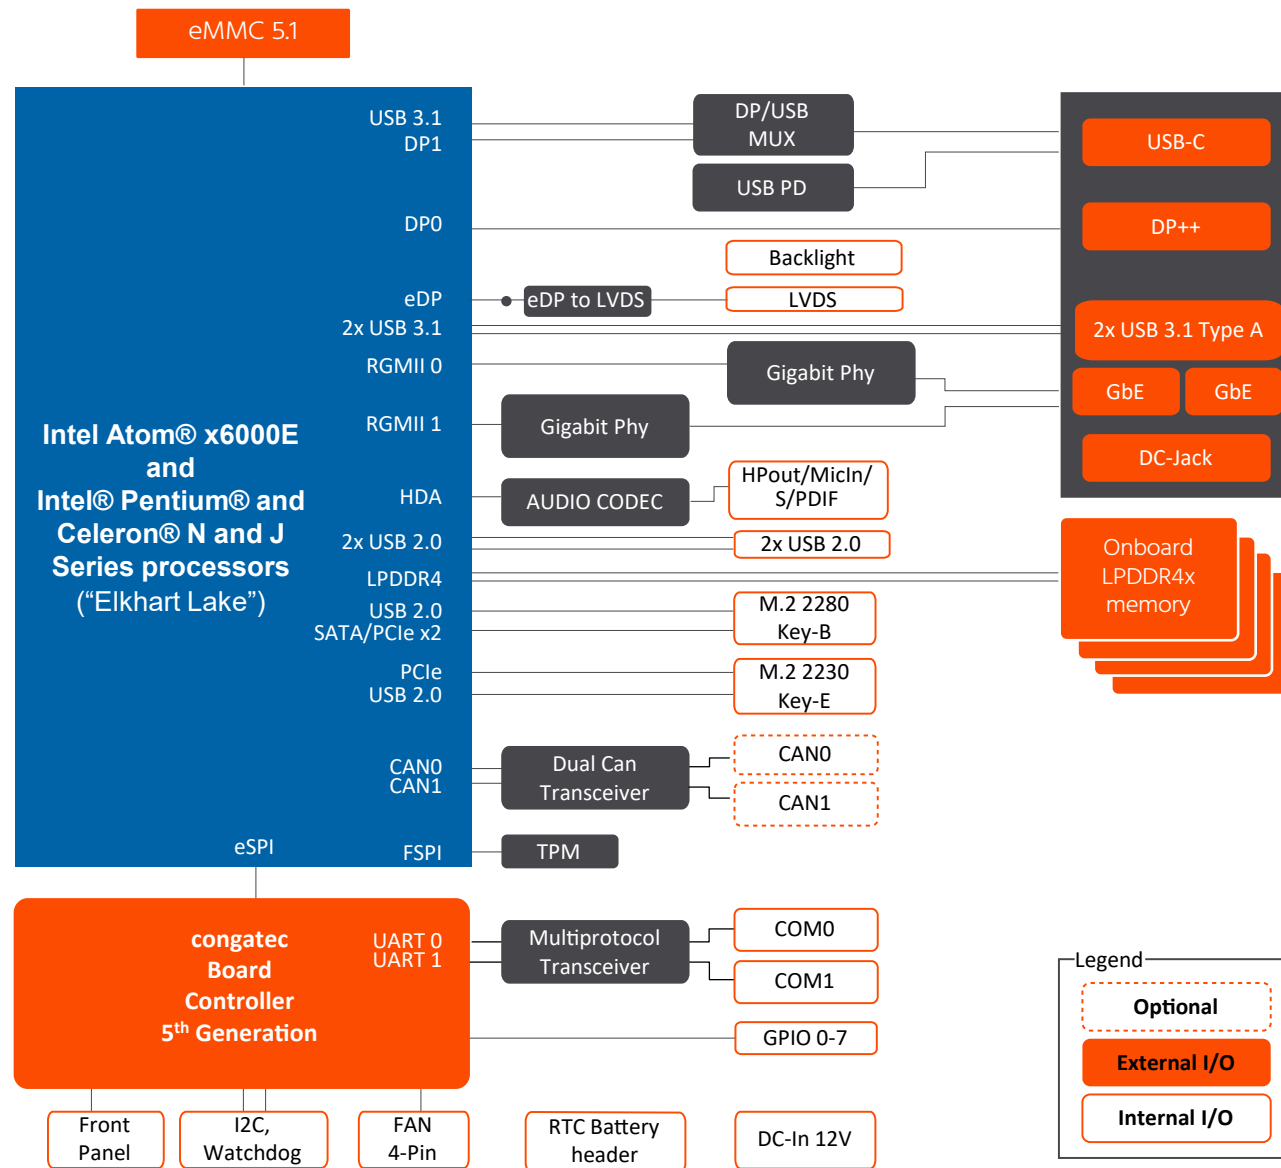

Note: \* Assembly options on request only.

## 4 Cooling Solutions

congatec GmbH offers the cooling solutions listed in Table 3 for conga-PA7. The dimensions of the cooling solutions are shown in the sub-sections. All measurements are in millimeters.



### Note

1. We recommend a maximum torque of 0.3 Nm for the mounting screws.
2. The gap pad material used on congatec heatspreaders may contain silicon oil that can seep out over time depending on the environmental conditions it is subjected to. For more information about this subject, contact your local congatec sales representative and request the gap pad material manufacturer's specification.




### Caution








1. The congatec heatspreaders/cooling solutions are tested only within the commercial temperature range of 0° to 60°C. Therefore, if your application that features a congatec heatspreader/cooling solution operates outside this temperature range, ensure the correct operating temperature of the module is maintained at all times. This may require additional cooling components for your final application's thermal solution.
2. For adequate heat dissipation, use the mounting holes on the cooling solution to attach it to the module. Apply thread-locking fluid on the screws if the cooling solution is used in a high shock and/or vibration environment. To prevent the standoff from stripping or cross-threading, use non-threaded carrier board standoffs to mount threaded cooling solutions.
3. For applications that require vertically-mounted cooling solution, use only coolers that secure the thermal stacks with fixing post. Without the fixing post feature, the thermal stacks may move.

## 4.1 CSP Dimensions

PN: 048952

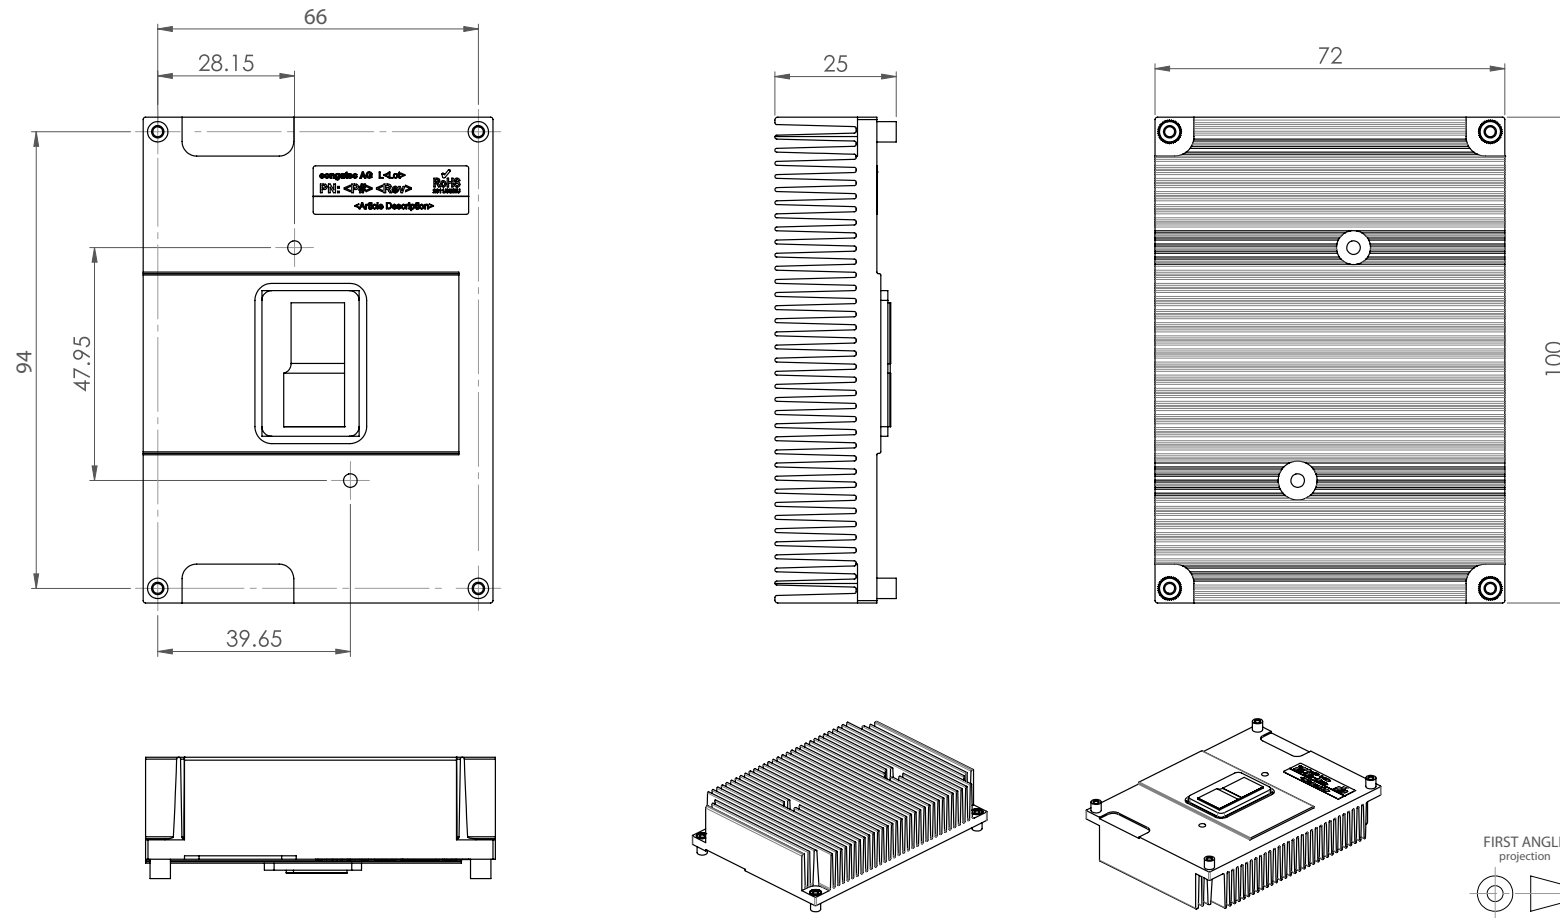



PN: 048953

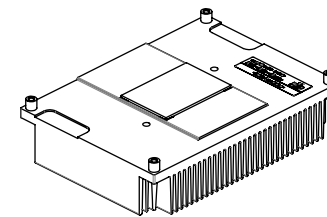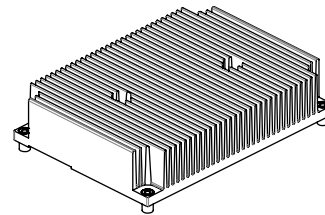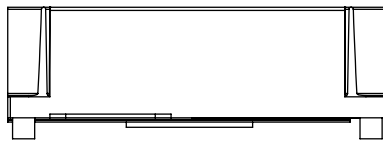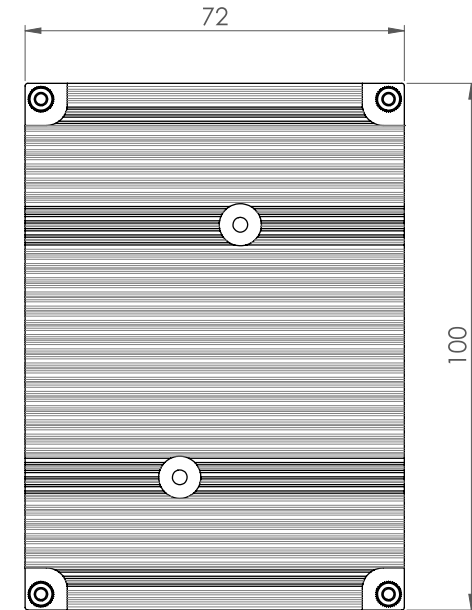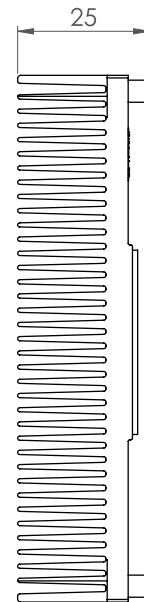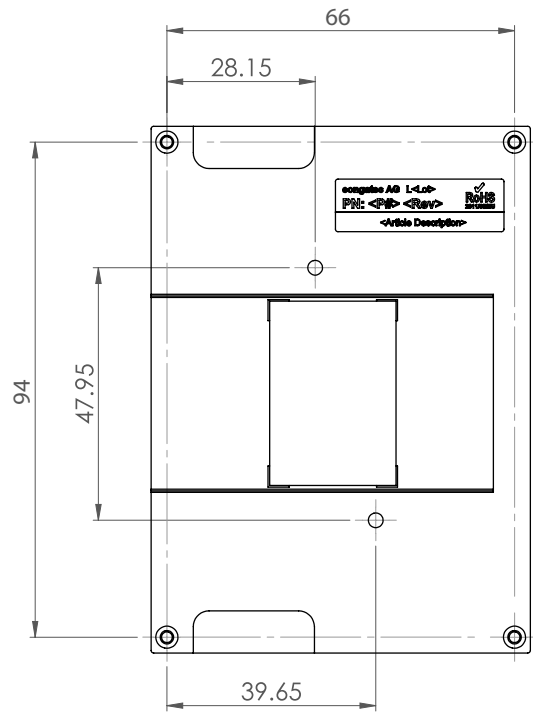


## 4.2 HSP Dimensions


PN: 048950, 048954

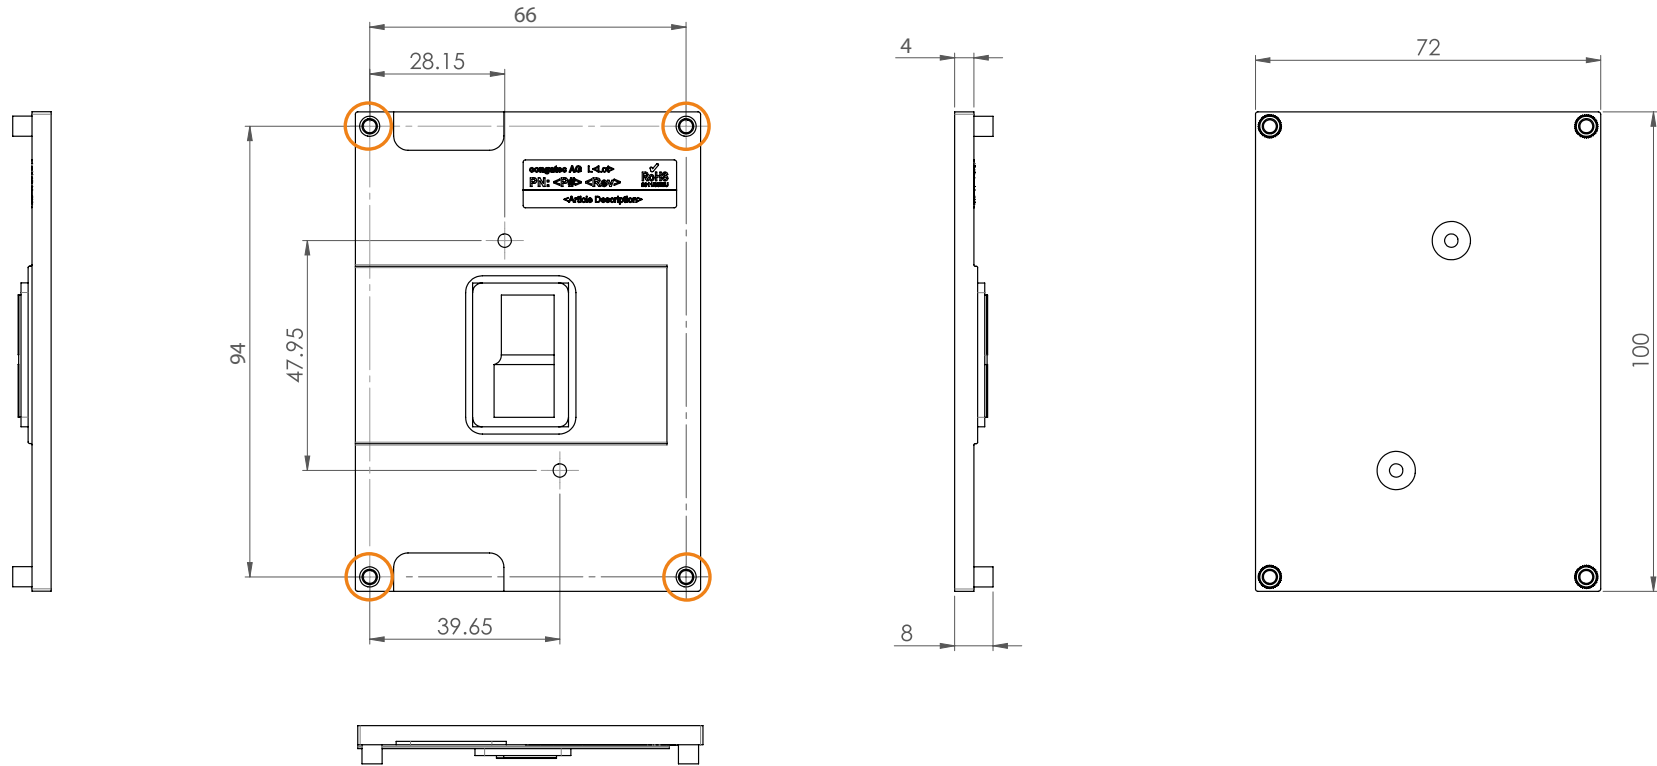



-  M2.5 x 8 mm threaded standoff (PN: 048950)  
or  
ø2.7 x 8 mm non-threaded standoff (PN: 048954)

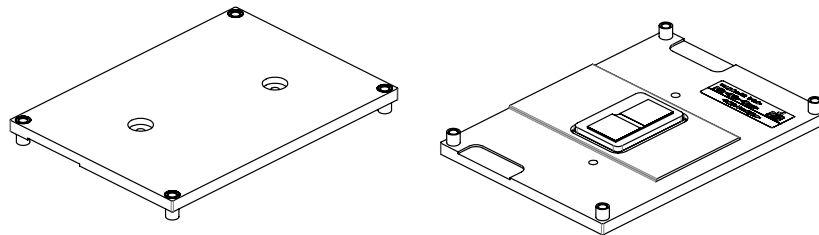


FIRST ANGLE  
projection




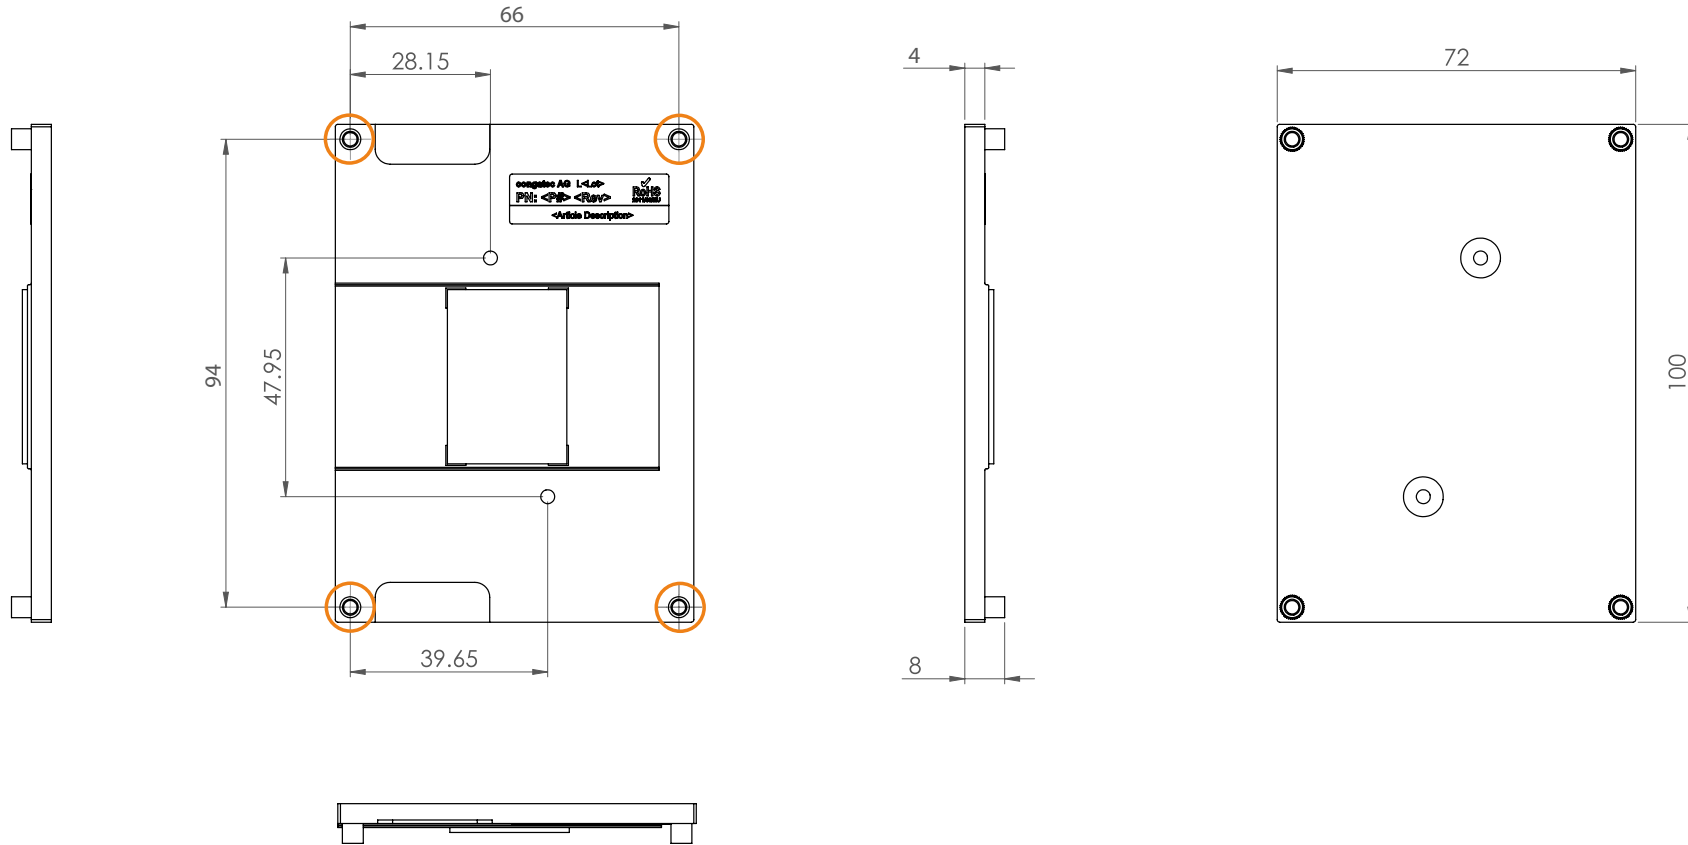

 M2.5 x 8 mm threaded standoff (PN: 048950)  
 or  
 ø2.7 x 8 mm non-threaded standoff (PN: 048954)

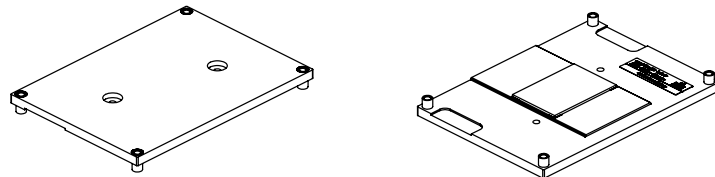

FIRST ANGLE  
projection



## 5 Connector Description

### 5.1 Power Supply Connectors

The conga-PA7 provides a DC power jack, a 2-pin power connector, and a USB Type-C® port to connect a power supply. Only connect one power supply to power the conga-PA7. The required power supply voltage is specified in section 2.4 "Power Supply Voltage".


#### 5.1.1 DC Power Jack

The conga-PA7 provides a standard DC power jack (X21), protected against short transient overvoltage and ESD. Optionally, the conga-PA7 can provide a DC power jack with locking mechanism, including screw type connectors (assembly option).

Table 9 X21 Pinout

Pin	Description
Center Pin	+12V
Sleeve/Barrel	GND

X21

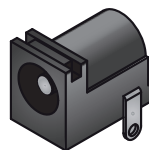

#### Connector Type

X21: DC power jack, 5.5x2.5 mm diameter


#### 5.1.2 2-Pin Power Connector

The conga-PA7 provides a 2-pin power connector (X22), protected against short transient overvoltage and ESD. Alternatively, this connector can be used as a +12V power output instead.

Table 10 X22 Pinout

Pin	Description
1	+12V
2	GND

X22

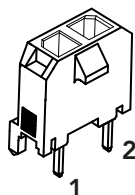

#### Connector Type


X22: 2x1 pins, 3.00 mm pitch (Molex 43650-0217); Possible Mating Connector: Molex 436450-0200



### 5.1.3 USB Type-C® Port

The conga-PA7 can be powered via the USB Type-C® port (X9).

#### Connector Type

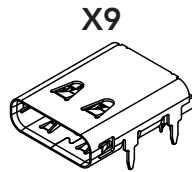

X9: USB Type-C® Port



**Note**  
The USB power adapter must supply 12V and enough current for the intended use case (min. 3 A is recommended). Many USB power adapters only supply 5V. The conga-PA7 will not power up if the USB power adapter only supplies 5V.

## 5.2 Cell Battery Header

The conga-PA7 provides a CR2032 cell battery (BR2330A for industrial variants) connected to header X23.

Table 11 X23 Pinout

Pin	Description
1	+3V
2	GND

#### Connector Type

X23: 2x1 pins, 1.25 mm pitch (Molex 53398-0271); Possible Mating Connector: Molex 51021-0200





#### Warning

Danger of explosion if battery is incorrectly replaced. Replace only with same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.



**Note**  
The battery has an adhesive tape on its shrinking tube. This tape enables the system integrator to adequately position the battery in the system case. The functionality of adhesive tape is time limited if exposed to higher temperatures and harsh or vibrant environment. The system integrator must ensure a stable position in this case.

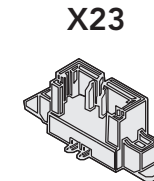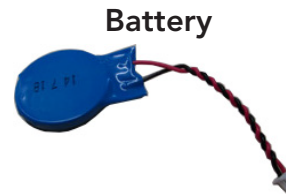

## 5.3 System State LED

The conga-PA7 provides an onboard bi-color LED (D20) at the top side that indicates the system state as described in the table below:

Table 12 D20 Description


LED	System State
Green	S0 (Working)
Orange	S3 (Sleeping)
Green + Orange (low intensity)	S5 (Soft Off)

## 5.4 Audio Header

The conga-PA7 provides an HD audio header (X6). The signals are routed from an HD audio codec (Cirrus Logic CS4207).

Table 13 X6 Pinout

Pin	Default Signal	Description
1	MIC_L	Analog Microphone Input - Left Channel
2	GND_HDA	Audio Ground
3	MIC_R	Analog Microphone Input - Right Channel
4	+V5	+5V Power Supply (for external speaker amplifier; max. 1 A shared with pin 10)
5	MIC_JD	Microphone Jack Detection
6	HP_R	Headphone Line Out - Right Channel
7	GND_HDA	Audio Ground
8	HP_L	Headphone Line Out - Left Channel
9	HP_JD	Headphone Jack Detection
10	+V5	+5V Power Supply (for S/PDIF optical transmitter; max. 1 A shared with pin 4)
11	GND	Digital Ground for S/PDIF and an external class-D amplifier
12	SPDIF_OUT	S/PDIF Output (3.3V)

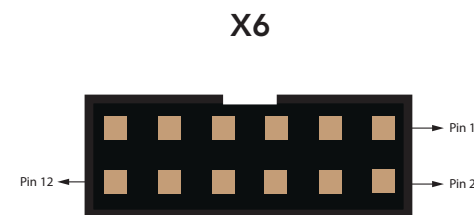

### Connector Type


X6: 6x2 pins, 2.0 mm pitch, box header

## 5.5 USB Interfaces

The conga-PA7 provides two USB Type-A ports, one USB Type-C® port, and one header for two additional USB 2.0 ports. USB 2.0 signals are also routed to the M.2 Key-B (X10) and M.2 Key-E (X11) connectors.

### 5.5.1 USB Type-A Ports

The conga-PA7 provides two USB Type-A ports (X7) with support for USB 3.1 Gen 2 (up to 10 Gbps) and USB wake (configurable in BIOS menu). Each port can supply up to 1 A.

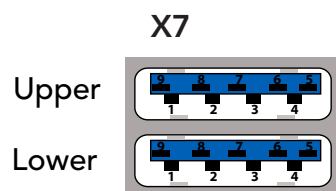


#### Connector Type

X7: *Dual-stacked USB Type-A Ports*

### 5.5.2 USB Type-C® Port

The conga-PA7 provides one USB Type-C® port (X9) with support for:

- USB 3.1 Gen 2 (up to 10 Gbps)
- Power Delivery (up to 5V @ 3A)
- DP Alt Mode (up to 4K @ 60Hz with a 4-lane adapter)
- USB wake

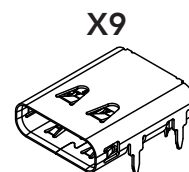

#### Connector Type


X9: *USB Type-C® Port*

## 5.5.3 USB 2.0 Header

The conga-PA7 provides a header (X8) for two external USB 2.0 ports with support for USB wake (configurable in BIOS menu).

Table 14 X8 Pinout

Port 1			Port 2		
Pin	Signal	Description	Pin	Signal	Description
1	+5V	+5V supply	2	+5V	+5V supply
3	Data1-	Hi-speed differential signal (negative)	4	Data2-	Hi-speed differential signal (negative)
5	Data1+	Hi-speed differential signal (positive)	6	Data2+	Hi-speed differential signal (positive)
7	GND	Ground	8	GND	Ground
9	SH	Shield Ground	10	SH	Shield Ground

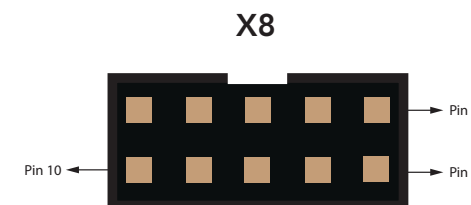

### Connector Type

X8: 5x2 pins, 2.00 mm pitch (Molex 87832-1014); Possible Mating Connector: Molex 51110-1051

## 5.6 Ethernet Ports

The conga-PA7 provides two Ethernet ports (X12, X13) with support for:

- Gigabit Ethernet (GbE)
- Wake-on-LAN (WOL)
- Time-Sensitive Networking (TSN)
- Out-Of-Band Management (OOB)




### Note

The real-time trigger signals are provided on feature connector X20. For more information, see section 6.1.3 "GPIOs and Real-Time Trigger Signals".

Table 15 X12, X13 Description

LED Left Side	Description	LED Right Side	Description
Off	10 Mbps link speed	Off	No link
Green	100 Mbps link speed	Steady On	Link established, no activity detected
Orange	1000 Mbps link speed	Blinking	Link established, activity detected

X12, X13

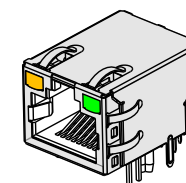

---

## Connector Type

X12, X13: 8-pin RJ45 connector with Gigabit magnetic and LEDs


## 5.7 Display Interfaces

The conga-PA7 supports up to three displays via one DP++ port, one DP over USB Type-C® port, and one LVDS header.

### 5.7.1 DP++ Port

The conga-PA7 provides one DP++ port (X5) with support for up to 4K @ 60Hz (DP 1.4).

X5

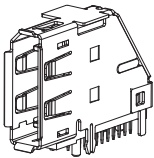


## Connector Type

X5: Full-Size DisplayPort Connector

### 5.7.2 USB Type-C® Port

The conga-PA7 provides one USB Type-C® port (X9) with support for DP Alt Mode up to 4K @ 60Hz.

X9

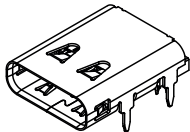

## Connector Type

X9: USB Type-C® port


### 5.7.3 LVDS Header

The conga-PA7 provides an LVDS header (X3) via an eDP to LVDS bridge by default. It supports 18/24-bit single/dual channel, selectable LCD voltage, VESA color mappings, automatic panel detection and resolution up to 1920x1200 @ 60 Hz in dual LVDS mode.

If eDP or MIPI-DSI is required instead of LVDS, contact congatec technical support.

Table 16 X3 Pinout

Pin	Signal	Pin	Signal
1	GND	2	GND
3	LVDS_EVEN_TX3P / eDP_TX3P	4	LVDS_ODD_TX3P
5	LVDS_EVEN_TX3N / eDP_TX3N	6	LVDS_ODD_TX3N
7	GND	8	GND
9	LVDS_EVEN_TX2P / eDP_TX2P	10	LVDS_ODD_TX2P
11	LVDS_EVEN_TX2N / eDP_TX2N	12	LVDS_ODD_TX2N
13	GND	14	GND
15	LVDS_EVEN_TX1P / eDP_TX1P	16	LVDS_ODD_TX1P
17	LVDS_EVEN_TX1N / eDP_TX1N	18	LVDS_ODD_TX1N
19	GND	20	GND
21	LVDS_EVEN_TX0P / eDP_TX0P	22	LVDS_ODD_TX0P
23	LVDS_EVEN_TX0N / eDP_TX0N	24	LVDS_ODD_TX0N
25	GND	26	GND
27	LVDS_EVEN_CLKP / eDP_AUXP	28	LVDS_ODD_CLKP
29	LVDS_EVEN_CLKN / eDP_AUXN	30	LVDS_ODD_CLKN
31	GND	32	GND
33	DDC_DAT (EDID, 3.3V level bidirectional)	34	DDC_CLK (EDID, 3.3V level output)
35	VCC (+3.3V or +5V, fuse with 1A hold current)	36	VCC (+3.3V or +5V, fuse with 1A hold current)
37	+3.3V for EDID (optional)	38	VCC (+3.3V or +5V, fuse with 1A hold current)
39	VDDEN (output, 3.3V level)	40	eDP_HPD# (optional)

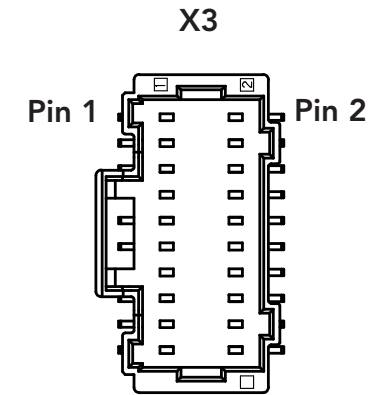

#### Connector Type

X3: 40 pins, 1.00 mm pitch (Molex 501190-4017); Possible Mating Connector: Molex 501189-4010

#### Note


1. For a single channel LVDS panel, use the LVDS\_ODD pins.
2. congatec offers an LVDS cable for 17" AUO Optonics G170EG01 V.1 panel only (see section Table 4 "Cables").

### 5.7.3.1 Backlight Power Header

The conga-PA7 provides a backlight power header (X4) with support for 12V and 5V.

Table 17 X4 Pinout

Pin	Signal	Description
1	+12V	12V Backlight inverter power
2	+12V	12V Backlight inverter power
3	GND	Ground
4	GND	Ground
5	BKLTCTL_5V	Backlight PWM control (+5V)
6	BKLTEN_5V	Backlight Enable (+5V)
7	BKLTEN	Backlight Enable (+3.3V)
8	BKLTCTL	Backlight PWM control (+3.3V)
9	+5V	Power rail with +5V
10	+5V	Power rail with +5V

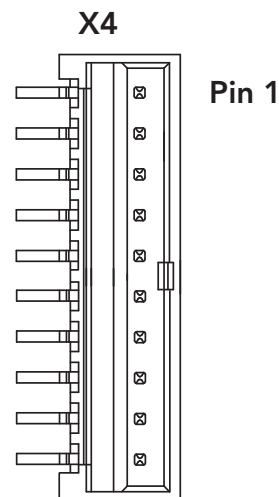

#### Connector Type

X4: 10x1 pins, 1.5 mm pitch (Molex 87437-1043); Possible Mating Connector: Molex 87439-1000

#### Note

Pin 1 and 2 share a 1.5 A resettable fuse. Pin 9 and 10 share a 1.1 A resettable fuse.

### 5.7.3.2 Panel Power Jumper

The conga-PA7 supports 3.3V and 5V LVDS panels. Set the panel voltage (X3 pins 35, 36, and 38) with jumper X24.

Table 18 X24 Settings

Pin	Setting
1 - 2	3.3V
2 - 3	5V

#### X24



#### Connector Type

X24: 3x1-pin, 2.00 mm pitch


## 5.8 COM Ports

The conga-PA7 provides two COM ports (X15, X16) on the bottom side. Both ports are routed from the congatec Board Controller (cBC) through a transceiver (ISL3333) and support RS232, RS422, and RS485.

Table 19 X15, X16 Pinout

Pin	RS232 Signal	RS422 / RS485 Signal
1	GND	GND
2	TXD	TX-
3	RTS#	TX+
4	CTS#	RX+
5	RXD	RX-

**X15, X16**

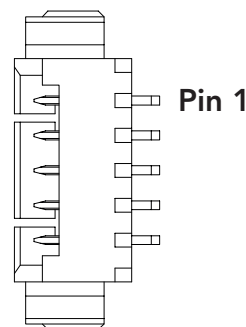

### Connector Type

X15, X16: 5x1 pins, 1.25 mm pitch (Molex 53261-0571); Possible Mating Connector: Molex 51021-0500



### Caution

1. If termination is required, a 120 Ohm termination resistor must be added externally across pin 4 (RX+) and 5 (RX-).
2. For RS485 mode, TX and RX signals must be coupled externally.



### Note

1. The port modes can be configured in the BIOS setup menu (default mode: RS232).
2. RS485 mode provides echo cancellation.
3. RS422 and RS485 modes do not provide galvanic isolation.
4. RS485 mode uses Automatic Direction Control and it is based on a delay circuit triggered by the TXD signal. Therefore, a small delay is present after sending data and before TX output of the transceiver is disabled (typ. 2ms).
5. RS485 mode supports transfer rate 9600kbps or higher. Lower transfer rates are not supported by design.
6. congatec offers adapter cables for the COM port headers. For more information, see Table 4.



## 5.9 CAN Ports

Optionally, the conga-PA7 can provide two CAN ports (X1, X2) on the bottom side (assembly option) with support for:


- ISO 11898-1 (Identical to Bosch CAN protocol specification 2.0 part A, B)
- ISO 11898-4 (Time-triggered communication)
- CAN FD protocol specification 1.0

Both ports are connected to the SoC via a transceiver (TCAN1046V-Q1) and share a resettable 500 mA fuse.

Table 20 X1, X2 Pinout

Pin	Signal
1	+12V (shared 500 mA fuse for X1 and X2)
2	CAN H
3	CAN L
4	GND

X1, X2

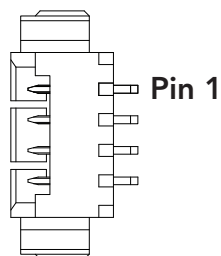

### Connector Type

X1, X2: 4x1 pins, 1.25 mm pitch (Molex 53261-0471); Possible Mating Connector: Molex 51021-0400



### Caution

A 120 Ohm termination resistor must be added externally across pin 2 (CAN H) and 3 (CAN L).



### Note


The silicon vendor supports CAN ports in Yocto Operating System only.

## 5.10 M.2 Key-B

The conga-PA7 provides an M.2 Key-B connector (X10) for 2280 sized cards with support for PCIe Gen3 x2, SATA 6 Gb/s, and USB 2.0. Optionally, the conga-PA7 can support 3042/2242 sized cards instead (assembly option).

Table 21 X10 Pinout

Pin	Signal	Pin	Signal
2	3.3V	1	CONFIG_3
4	3.3V	3	GND
6	FULL_CARD_POWER_OFF# (O)(0/1.8V or 3.3V)	5	GND
8	W_DISABLE1# (O)(0/3.3V)	7	USB_D+
10	NC	9	USB_D-
	Key-B	11	GND
	Key-B		Key-B
	Key-B		Key-B
	Key-B		Key-B
	Key-B		Key-B
20	NC	21	NC
22	NC	23	NC
24	NC	25	NC
26	NC	27	GND
28	NC	29	PERn1
30	NC	31	PERp1
32	NC	33	GND
34	NC	35	PETn1
36	NC	37	PETp1
38	DEVSLP (O)	39	GND
40	NC	41	PERn0 / SATA RX+
42	NC	43	PERp0 / SATA RX-
44	NC	45	GND
46	NC	47	PETn0 / SATA TX-
48	NC	49	PETp0 / SATA TX+
50	PERST# (O) (0/3.3V)	51	GND
52	CLKREQ# (I/O) (0/3.3V)	53	REFCLKn

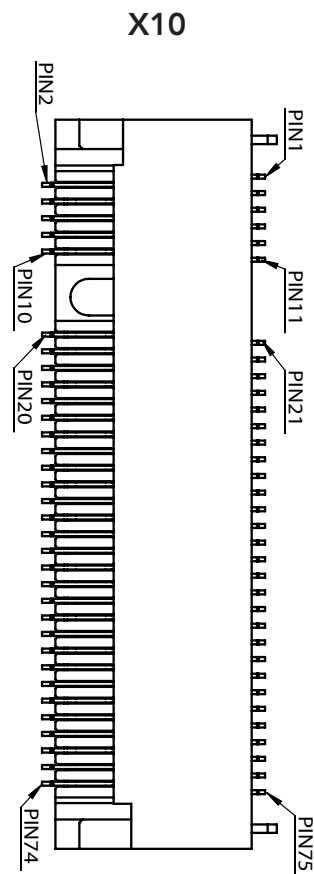

54	NC	55	REFCLKp
56	NC	57	GND
58	NC	59	NC
60	COEX3	61	NC
62	COEX2	63	NC
64	COEX1	65	NC
66	NC	67	RESET# (O)(0/1.8V)
68	NC	69	CONFIG_1
70	3.3V	71	GND
72	3.3V	73	GND
74	3.3V	75	CONFIG_2

### Connector Type

X10: M.2 Key-B Connector

### Note

I/O directions are for the conga-PA7 and not a card.


## 5.11 M.2 Key-E

The conga-PA7 provides an M.2 Key-E connector (X11) for 2230 sized cards with support for PCIe Gen3 x1 and USB 2.0.

Table 22 X11 Pinout

Pin	Signal	Pin	Signal
2	3.3V	1	GND
4	3.3V	3	USB_D+
6	LED_1# (I)(OD)	5	USB_D-
8	NC	7	GND
10	NC	9	NC
12	NC	11	NC
14	NC	13	NC
16	NC	15	NC
18	GND	17	NC
20	NC	19	NC

22	NC	21	NC
	Key-E	23	NC
	Key-E		Key-E
	Key-E		Key-E
	Key-E		Key-E
	Key-E		Key-E
32	NC	33	GND
34	NC	35	PETp0
36	NC	37	PETn0
38	NC	39	GND
40	NC	41	PERp0
42	NC	43	PERn0
44	COEX3	45	GND
46	COEX2	47	REFCLKp0
48	COEX1	49	REFCLKn0
50	NC	51	GND
52	PERST0# (O)(0/3.3V)	53	CLKREQ0# (I/O)(0/3.3V)
54	W_DISABLE2# (O)(0/3.3V)	55	PEWAKE0# (I/O)(0/3.3V)
56	W_DISABLE1# (O)(0/3.3V)	57	GND
58	NC	59	NC
60	NC	61	NC
62	NC	63	GND
64	NC	65	NC
66	NC	67	NC
68	NC	69	GND
70	NC	71	NC
72	3.3V	73	NC
74	3.3V	75	GND

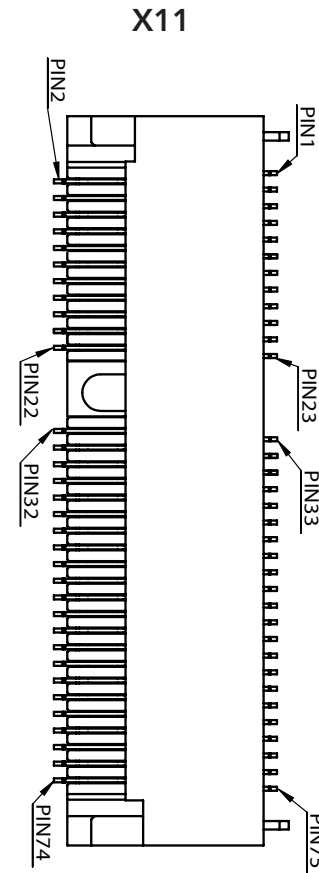

## Connector Type

X11: M.2 Key-E Connector

## Note


I/O directions are for the conga-PA7 and not a card.

## 5.12 CPU Fan Header

The conga-PA7 provides a standard 4-pin 12V CPU fan header (X17) with support for PWM control and tachometer.

Table 23 X17 Pinout

Pin	Signal
1	GND
2	+12VDC (resettable 500 mA fuse)
3	FAN_TACHOIN
4	FAN_CTRL

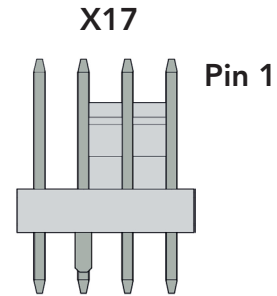

### Connector Type


X17: Standard 4-pin, 2.54 mm pitch fan header

## 5.13 BIOS Flash Header

The conga-PA7 provides a BIOS flash header (X14) for debug and service purposes only.

Table 24 X14 Pinout

Pin	Signal	Pin	Signal
1	CS0#	2	+1.8V
3	MISO	4	IO3
5	IO2	6	CLK
7	GND	8	MOSI
9	BIOS_ALT#	10	UART1_TXD

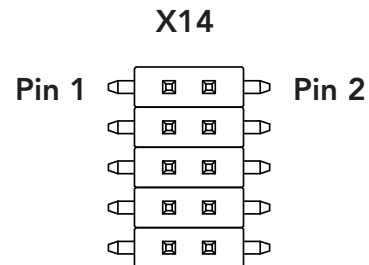

### Connector Type

X14: 5x2 pins, 1.27 mm pitch

## 6 Additional Features

### 6.1 Feature Connectors


The conga-PA7 provides three feature connectors (X18, X19, and X20).

#### 6.1.1 Buttons and LEDs

The conga-PA7 offers lid, sleep, reset, power buttons, and LED signals via the feature connector X18 as described in the table below:

Table 25 X18 Pinout

Pin	Default Signal	Assembly Option	Description
1	LID_BTN#	INTRUDER#	Active-low signal brings the system into sleep state or wakes it up. Requires an ACPI compatible operating system. Assembly option: Connect to INTRUDER# of SoC.
2	GND		Ground
3	SLP_BTN#		Active-low signal triggers sleep state.
4	GND		Ground
5	RST_BTN#		Active-low signal triggers hard reset. Does not keep the system in reset when connected to ground.
6	GND		Ground
7	PWR_BTN#		Active-low signal triggers power-up sequence. Pulse duration of $\geq 4$ seconds triggers forced shutdown. Signal can also be triggered by the cBC depending on BIOS settings (see section 6.4.2 "Power Loss Control").
8	GND		Ground
9	Main color LED (anode) / Alt color LED (cathode)		Bidirectional power LED is supported. Main color indicates runtime mode (S0). Alternate color indicates sleep mode (S3, suspend to RAM).
10	Main color LED (cathode) / Alt color LED (anode)		
11	WiFi_LED (anode)	WWAN_LED (anode)	LED indicates activity on M.2 Key-E interface.
12	WiFi_LED# (cathode)	WWAN_LED# (cathode)	Assembly option: LED indicates activity on M.2 Key-B interface.

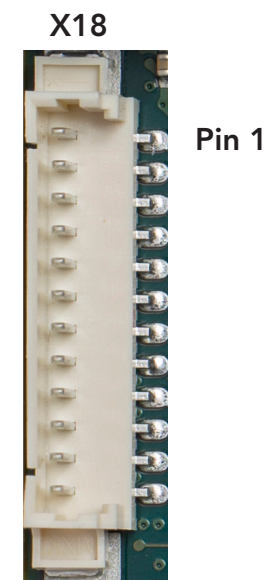

#### Connector Type

X18: 12x1 pins, 1.25 mm pitch (Molex 53398-1271); Possible Mating Connector: Molex 51021-1200

## Note


1. The LEDs on the conga-PA7 are supplied by +3.3 V with 324 Ohm series resistors. LED terminals can be directly to the X18 pins.
2. The buttons are edge triggered with 16 ms debouncing and can be directly connected to a tactile switch or OC output.

## 6.1.2 I2C and Watchdog

The conga-PA7 provides I2C, batlow, and watchdog signals via the feature connector X19 as described in the table below:

Table 26 X19 Pinout

Pin	Default Signal	Assembly Option	Description
1	BATLOW#		Battery low input, 10k PU to +3.3V standby, OC or OD output must be used to drive the signal, active low.
2	+3.3V Standby		+3.3V power output (active in standby/suspend)
3	PM THRM#	PLT RST#	External event signal (thermal event), 10k PU to +3.3V runtime, OC or OD output must be used to drive the signal, active low. Assembly option: Platform reset signal output, active low.
4	I2C_CLK		I2C clock output
5	I2C_DAT		I2C data
6	GND		Ground
7	WDTRIG#	SLP S3#	Watchdog trigger input signal, 10k PU to +3.3V runtime, OC or OD output is recommended to use, active low. Assembly option: SLP S3 output, active low.
8	WDOUT	SLP S4#	Watchdog output from board controller, 100k PD. Assembly option: SLP S4 output, active low.

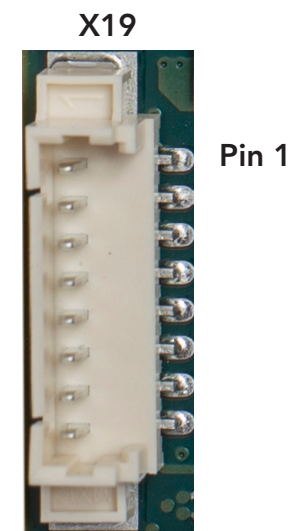

## Connector Type

X19: 8x1 pins, 1.25 mm pitch (Molex 53398-0871); Possible Mating Connector: Molex 51021-0800

## Note


1. A resettable fuse limits the 3.3V power budget of connector X19 (pin 2) and X20 (pin 10) to a total of 500 mA hold current.
2. The signals are 3.3V compatible.

### 6.1.3 GPIOs and Real-Time Trigger Signals

The conga-PA7 provides GPIOs and real-time trigger signals via the feature connector X20 as described in the table below:

Table 27 X20 Pinout

Pin	Default Signal	Assembly Option	Description
1	GPIO 0		GPIO 0 from board controller, 10k PU to +3.3V standby.
2	GPIO 1		GPIO 1 from board controller, 10k PU to +3.3V standby.
3	GPIO 2		GPIO 2 from board controller, 10k PU to +3.3V standby.
4	GPIO 3		GPIO 3 from board controller, 10k PU to +3.3V standby.
5	GND		Ground
6	GPIO 4		GPIO 4 from board controller, 10k PU to +3.3V standby.
7	GPIO 5		GPIO 5 from board controller, 10k PU to +3.3V standby.
8	GbE0 TRIG	GPIO 6	IEEE 1588 trigger signal output, GbE 0 port. Assembly Option: GPIO 6 from board controller, 10k PU to +3.3V standby.
9	GbE1 TRIG	GPIO 7	IEEE 1588 trigger signal output, GbE 1 port. Assembly Option: GPIO 7 from board controller, 10k PU to +3.3V standby.
10	+3.3V standby		+3.3V power output (active in standby/suspend).

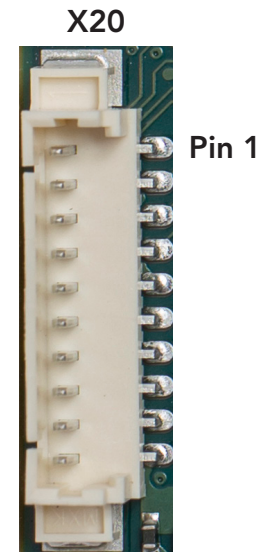

#### Connector Type

X20: 10x1 pins, 1.25 mm pitch (Molex 53398-1071); Possible Mating Connector: Molex 51021-1000

#### Note

1. A fuse limits the 3.3V power budget of connector X19 (pin 2) and X20 (pin 10) to a total of 500 mA hold current.

## 6.2 DRAM

The conga-PA7 provides onboard LPDDR4x memory. The default memory size and speed of each variant is listed in section 1.2 "conga-PA7". Optionally, the conga-PA7 can provide up to 16 GB LPDDR4x @ 3.733 MT/s (assembly option).

## 6.3 Flash Storage

The conga-PA7 provides onboard eMMC 5.1 flash storage. The default storage capacity of each variant is listed in section 1.2 "conga-PA7". Optionally, the conga-PA7 can provide up to 128 GB flash storage (assembly option).



---

## 6.4 congatec Board Controller (cBC)

The conga-PA7 is equipped with a Microchip Technology microcontroller. This onboard microcontroller plays an important role for most of the congatec BIOS features. The cBC fully isolates some of the embedded features such as system monitoring, I<sup>2</sup>C bus from the x86 core architecture. This improves performance and reliability, even during low power mode.

### 6.4.1 Fan Control

The congatec Board Controller on the conga-PA7 controls the power supply to the fan with the PWM signal.

### 6.4.2 Power Loss Control

The cBC has full control of the power-up of the SBC. Therefore, it can be used to specify the behavior of the system after an AC power loss condition. Supported modes are "Turn On", "Remain Off" and "Last State".

### 6.4.3 Board Information

The cBC provides a rich data-set of manufacturing and board information such as serial number, EAN number, hardware and firmware revisions, and so on. It also keeps track of dynamically changing data like runtime meter and boot counter.

## 6.5 OEM BIOS Customization

The conga-PA7 is equipped with congatec Embedded BIOS, which is based on American Megatrends Inc. Aptio UEFI firmware. The congatec Embedded BIOS allows system designers to modify the BIOS. For more information about customizing the congatec Embedded BIOS, refer to the congatec System Utility user's guide CGUTLm1x.pdf at [www.congatec.com](http://www.congatec.com) or contact technical support. The customization features supported are described in the following sections.

### 6.5.1 OEM Default Settings

This feature allows system designers to create and store their own BIOS default configuration. Customized BIOS development by congatec for OEM default settings is no longer necessary because customers can easily perform this configuration by themselves using the congatec system utility CGUTIL. See congatec application note AN8\_Create\_OEM\_Default\_Map.pdf on the congatec website for details on how to add OEM default settings to the congatec Embedded BIOS.

---

## 6.5.2 OEM Boot Logo

This feature allows system designers to replace the standard text output displayed during POST with their own BIOS boot logo. Customized BIOS development by congatec for OEM Boot Logo is no longer necessary because customers can easily perform this configuration by themselves using the congatec system utility CGUTIL. See congatec application note AN8\_Create\_And\_Add\_Bootlogo.pdf on the congatec website for details on how to add OEM boot logo to the congatec Embedded BIOS.

## 6.5.3 OEM POST Logo

This feature allows system designers to replace the congatec POST logo displayed in the upper left corner of the screen during BIOS POST with their own BIOS POST logo. Use the congatec system utility CGUTIL 1.5.4 or later to replace/add the OEM POST logo.

## 6.5.4 OEM BIOS Code/Data

With the congatec embedded BIOS, it used to be possible for system designers to add their own code to the BIOS POST process. This feature is no longer supported with the new UEFI based firmware.

## 6.5.5 OEM DXE Driver

This feature allows designers to add their own UEFI DXE driver to the congatec embedded BIOS. Contact congatec technical support for more information on how to add an OEM DXE driver.

## 6.6 congatec Battery Management Interface

In order to facilitate the development of battery powered mobile systems based on embedded modules, congatec has defined an interface for the exchange of data between a x86 CPU module (using an ACPI operating system) and a Smart Battery system. A system developed according to the congatec Battery Management Interface Specification can provide the battery management functions supported by an ACPI capable operating system (e.g. charge state of the battery, information about the battery, alarms/events for certain battery states, ...) without the need for any additional modifications to the system BIOS.

In addition to the ACPI-compliant Control Method Battery mentioned above, the latest versions of the conga-PA7 BIOS and board controller firmware also support the LTC1760 battery manager from Linear Technology and a battery only solution (no charger). All three battery solutions are supported on the I2C bus. This gives the system designer more flexibility when choosing the appropriate battery sub-system.

For more information about the supported Battery Management Interface contact your local congatec sales representative.

---

## 6.7 API Support (CGOS)

In order to benefit from the above mentioned non-industry standard feature set, congatec provides an API that allows application software developers to easily integrate all these features into their code. The CGOS API (congatec Operating System Application Programming Interface) is the congatec proprietary API that is available for all commonly used Operating Systems such as Win32, Win64, Win CE, Linux. The architecture of the CGOS API driver provides the ability to write application software that runs unmodified on all congatec CPU modules. All the hardware related code is contained within the congatec embedded BIOS on the module. See section 1.1 of the CGOS API software developers guide, which is available on the congatec website.

## 6.8 Thermal/Voltage Monitoring

The congatec Board Controller monitors the +12V input voltage, input current and two onboard thermal sensors. The CPU temperature is measured by its internal sensor.


## 6.9 External System Wake Event

The conga-PA7 supports USB, LAN, power/sleep/LID buttons and PCIe driven wake up events.

## 6.10 Security Features

The conga-PA7 provides an onboard TPM 2.0 chip (Infineon SLB9670) connected to the SPI interface.

# 7 Mechanical Drawing

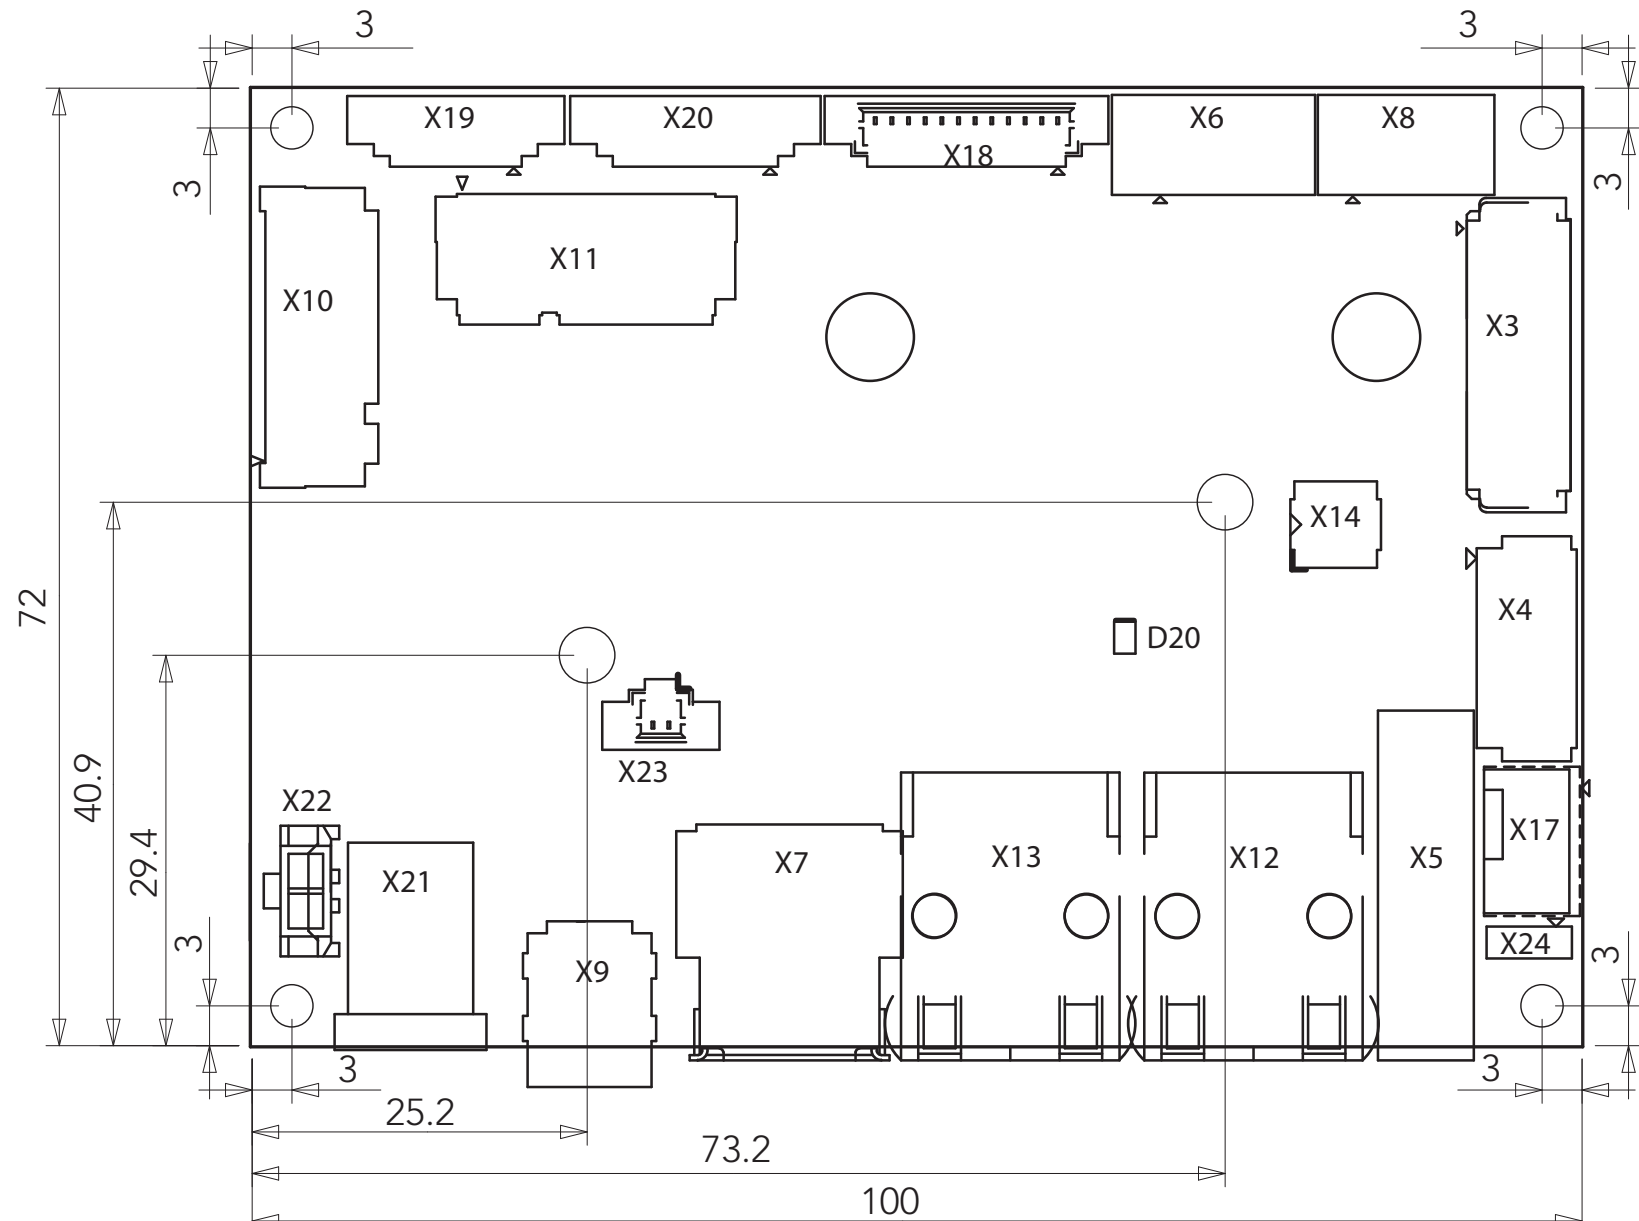

---

## 8 BIOS Setup Description

---

The BIOS setup description of the conga-PA7 can be viewed without having access to the SBC. However, access to the restricted area of the congatec website is required in order to download the necessary tool (CgMlfViewer) and Menu Layout File (MLF).

The MLF contains the BIOS setup description of a particular BIOS revision. The MLF can be viewed with the CgMlfViewer tool. This tool offers a search function to quickly check for supported BIOS features. It also shows where each feature can be found in the BIOS setup menu.

For more information, read the application note "AN42 - BIOS Setup Description" available at [www.congatec.com](http://www.congatec.com).



### Note

*If you do not have access to the restricted area of the congatec website, contact your local congatec sales representative.*

### 8.1 Navigating the BIOS Setup Menu

The BIOS setup menu shows the features and options supported in the congatec BIOS. To access and navigate the BIOS setup menu, press the <DEL> or <F2> key during POST.

The right frame displays the key legend. Above the key legend is an area reserved for text messages. These text messages explain the options and the possible impacts when changing the selected option in the left frame.

### 8.2 BIOS Versions

The BIOS displays the BIOS project name and the revision code during POST, and on the main setup screen. The initial production BIOS for conga-PA7 is identified as PA70R1xx, where:

- PA7 is the project name
- R is the identifier for a BIOS ROM file
- 1 is the feature number
- xx is the major and minor revision number.

The binary size of conga-PA7 BIOS is 32 MB.

---

## 8.3 Updating the BIOS

BIOS updates are recommended to correct platform issues or enhance the feature set of the SBC. The conga-PA7 features a congatec/AMI AptioEFI firmware on an onboard flash ROM chip. You can update the firmware with the congatec System Utility. The utility has five versions—UEFI shell, DOS based command line<sup>1</sup>, Win32 command line, Win32 GUI, and Linux version.

For more information about “Updating the BIOS” refer to the user’s guide for the congatec System Utility “CGUTLm1x.pdf” on the congatec website at [www.congatec.com](http://www.congatec.com).



<sup>1</sup>. *Deprecated*



*The DOS command line tool is not officially supported by congatec and therefore not recommended for critical tasks such as firmware updates. We recommend to use only the UEFI shell for critical updates.*

## 8.4 Supported Flash Device

The conga-PA7 supports flash device Winbond W25R256JWPIQ (32 MB). For more information about external BIOS support, refer to the Application Note “AN7\_External\_BIOS\_Update.pdf” on the congatec website at [www.congatec.com](http://www.congatec.com).